

Elan^{IC}

Quick Start Guide

ELANIC22L1S - ELANIC30R8S
ELANIC22L1SD - ELANIC30R8SD



938438
938439

How to Charge Elan^{IC}



When the inductive charging (IC) pod is plugged in and powered on without being attached to the foot, the charging LED on the IC pod will switch ON (steady).

To charge the foot, attach the IC pod to the foot.

The charging indicator LED on the foot is located on the right hand side of foot.



When the IC pod is attached to the foot and being charged, the IC pod LED light will pulsate slowly between ON and OFF and the charging LED on the foot will indicate charging status of the battery by flashing repeatedly – refer to diagrams.

Note... If, after attaching the IC pod to the foot, the light on the foot stays ON (steady) the battery is fully charged. Detach the IC pod.

Note... If the light on the IC pod or foot flashes vigorously, the charging is paused due to unit getting warm. Charging will automatically resume when cool.



After 6 hours operation the IC pod stops charging.

The IC pod LED stops pulsating and changes to ON (steady) and the charging LED on the foot switches OFF.


Remove IC pod. (Leaving attached adds no further charge.)




The ElanIC will start consuming battery charge immediately, whether in use or not.

Note... If the ElanIC is not used after being charged, the battery will begin to discharge gradually. After an extended period without use the battery will discharge completely, and will need to be recharged again.

How to Check Battery Level

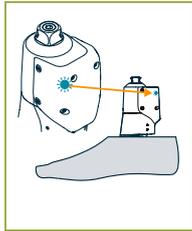

Left side battery charge level/Bluetooth® indicator

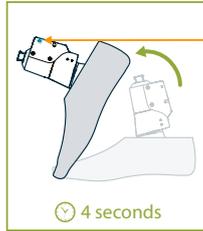

Tilt foot to ~45° and hold for 4 seconds.

⌚ 4 seconds



The LED will indicate battery level.

- 1 flash = battery low
- 2 flashes = battery medium
- 3 flashes = battery nearly full

LED Functionality Summary



Left side LED on ElanIC indicates current battery charge level and also Bluetooth® status.




Right side LED on ElanIC indicates battery charge level only while the device is being charged.

How to Activate the Bluetooth® Function


Please follow each step and check the battery power level indication (1, 2, or 3 short flashes) flashes twice. If not please repeat the sequence.



Left side battery charge level/Bluetooth® indicator

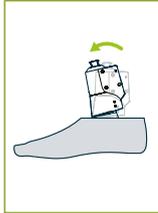

Fully dorsiflex the foot.

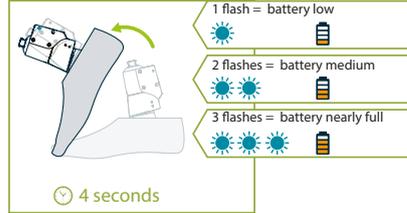


⌚ 4 seconds

Tilt whole foot to ~45° (while maintaining dorsiflexion) to activate Bluetooth®.

The left LED flashes the battery charge status indication (1, 2, or 3 short flashes) twice.*

*Note...If the battery charge status indication function has been disabled you will not see two sets of battery status flashes.

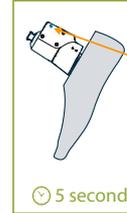


⌚ 5 seconds

Maintain tilted position.



After five seconds the LED indicator illuminates (steady ON).

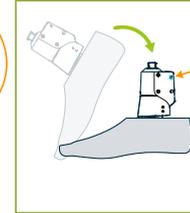

Return foot to standing position.



⌚ Discoverable for 7 minutes

LED indicator flashes continuously for 7 minutes. Bluetooth® is now discoverable.

Trademark Acknowledgements

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Blatchford is under License. Other trademarks and trade names are those of their respective owners. Elan and Blatchford are registered trademarks of Blatchford Products Limited.